



1.

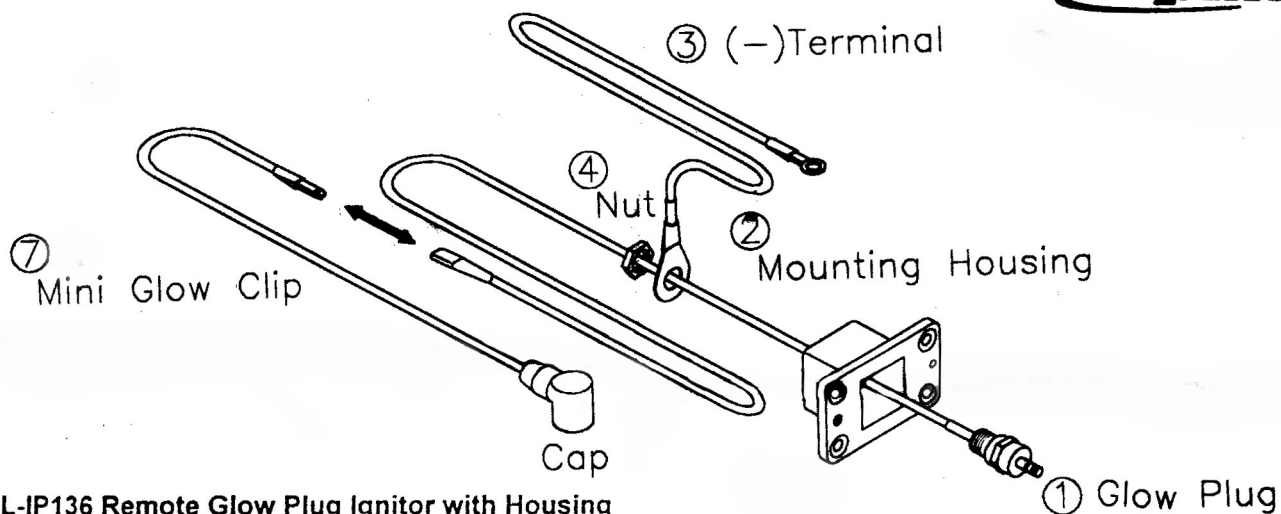


1/ Connect the glow plug (1) to the extension lead (2), then install this assembly into the plug housing. Slide over the extension lead the negative lead (3) then secure to the glow plug body with nut (4).

2.

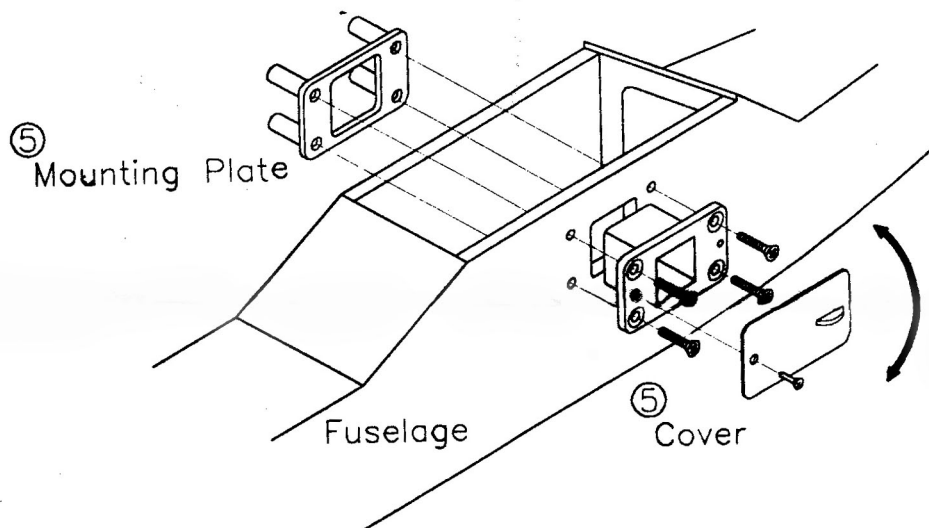

2/ Decide where the plug housing is to fit on the model and cut a hole to allow it to fit through the fuselage side. Attach the plug housing to the model using M3 x 15 self tapping screws through the fuselage side into the mounting plate (5). Attach the cover plate as shown with the M2 x 6 self tapping screw. This screw should be tight enough to hold the cover plate in the correct position, but still allow it to be rotated to allow access to the glow plug.

3.

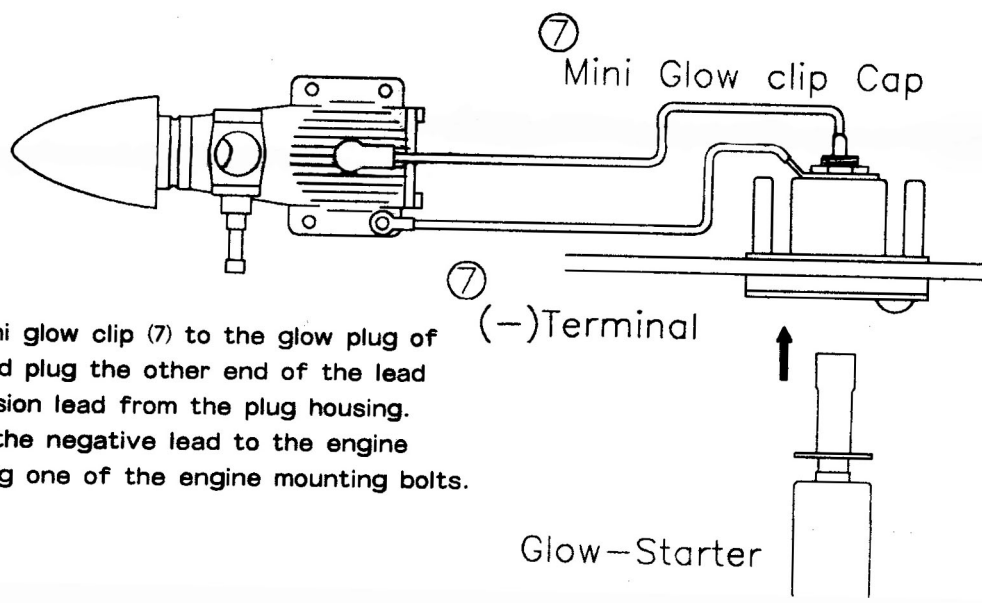

3/ Attach the mini glow clip (7) to the glow plug of the engine, and plug the other end of the lead into the extension lead from the plug housing. Finally attach the negative lead to the engine crankcase using one of the engine mounting bolts.