



PROPHET™ SPORT DUO 50W x2 LI-PO AND NI-MH AC BATTERY CHARGER

INSTRUCTION MANUAL | BEDIENUNGSANLEITUNG | MANUEL D'UTILISATION | MANUALE DI ISTRUZIONI

(DYNC2020)

ENGLISH

NOTICE
All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, Inc. For up-to-date product literature, visit horizonhobby.com and click on the support tab for this product.

Meaning of Special Language
The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:
NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND a little or no possibility of injury.
CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.
WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.
This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not attempt disassembly, use with incompatible components or augment product in any way without the approval of Horizon Hobby, Inc. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

Age Recommendation: Not for children under 14 years. This is not a toy.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAFETY PRECAUTIONS AND WARNINGS

- WARNING:** Failure to exercise caution while using this product and comply with the following warnings could result in product malfunction, electrical issues, excessive heat, FIRE, and ultimately injury and property damage.
- Always keep the battery away from any material that could be affected by heat.
- Always monitor the charging area and have a fire extinguisher available at all times.
- Always end the charging process if the battery becomes hot to the touch or starts to change form (swell) during the charge process.
- Always connect the charge cable to the charger first, then connect the battery to avoid short circuit between the charge leads. Reverse the sequence when disconnecting.
- Always connect the positive red leads (+) and negative black leads (-) correctly.
- Always disconnect the battery after charging, and let the charger cool between charges.
- Always charge in a well-ventilated area.
- Always terminate all processes and contact Horizon Hobby if the product malfunctions.
- WARNING:** Never leave charger unattended, exceed maximum charge rate, charge with non-approved batteries or charge batteries in the wrong mode. Failure to comply may result in excessive heat, fire and serious injury.
- CAUTION:** Always ensure the battery you are charging meets the specifications of this charger and that the charger settings are correct. Not doing so can result in excessive heat and other related product malfunctions, which can lead to user injury or property damage. Please contact Horizon Hobby or an authorized retailer with compatibility questions.
- Never leave the power supply, charger and battery unattended during use.
- Never attempt to charge dead, damaged or wet battery packs.
- Never attempt to charge a battery pack containing different types of batteries.
- Never allow children under 14 years of age to charge battery packs.
- Never charge batteries in extremely hot or cold places or place in direct sunlight.
- Never charge a battery if the cable has been pinched or shorted.
- Never connect the charger if the power cable has been pinched or shorted.
- Never connect the charger to an automobile 12V battery while the vehicle is running.
- Never attempt to dismantle the charger or use a damaged charger.
- Never attach your charger to both an AC and a DC power source at the same time.
- Never connect the input jack (DC input) to AC power.
- Always use only rechargeable batteries designed for use with this type of charger.
- Always inspect the battery before charging.

Included Items:
JST_XH Balance adapter (2)
Banana plug to EC3™ battery connector (2)
AC power cord (one region-US, EU, AU or UK)

- Short-circuit, over-current, reverse polarity, low input voltage and over-temperature protection
 - Insulated, color coded, banana jack, power output terminals (Red = Positive (+), Black = Negative (-))
 - Internal cooling fan with grill cover
 - Meets IP33CW, IK07 environmental specs
 - Rugged industrial plastic case
- SPECIFICATIONS**
- | | |
|-----------------------|---|
| AC Input Voltage | 100–240V AC (50–60Hz) |
| Charge Current | 0.1A to 6.0A per channel (in 0.1A increments/50W maximum per channel) |
| Operating Temperature | 0° C to + 50° C |
| Charging Mode | Ni-MH: Peak; Li-Po: Constant Current (CC)/Constant Voltage (CV) |
- Two charging ports can charge two batteries at once. Batteries can be different chemistries, capacities and cell counts
 - 50W charge power output for Ni-MH (4–8C) or Li-Po (1–6S) batteries
 - High-visibility, simplified user interface
 - Two 4-digit LED indicators to display charge current, battery type, charge capacity, cell voltages and error codes
 - Select charge current from 0.1A to 6.0A with two independent charge current dials
 - Three LEDs per channel (red, yellow and green) to indicate charging status

CAUTION: Before charging, always ensure you have chosen the correct battery chemistry type for the battery you are charging.

GETTING STARTED

CAUTION: Always power ON the charger before connecting a battery, or damage to the charger and the battery can result.

When Using an External AC Power Source:

- Connect the AC power cord to the **AC Power Input Port (A)**.
- Connect the AC power cord to the AC power source.
- Power ON the charger with the **Power Switch (B)**.

OPERATING YOUR CHARGER

- Instructions are provided for one channel. The same applies for the other channel.*
- Use the **Battery Type Switch (D)** to select the battery type (Ni-MH/Li-Po/Li-Po Fast) for the battery you wish to charge. The **4-Digit LED Indicator (C)** will display the battery type for 2 seconds, then show the charge current selected by the **Charge Current Dial (E)**.
 - Select the charge current (0.1A–6.0A) by rotating the **Charge Current Dial**. The 4-Digit LED Indicator will display the charge current.
 - Connect the banana plugs of the battery adapter cable to the **Power Output Black (-) (F)** and **Power Output Red (+) (G)**, making sure that the positive and negative connectors are not reversed.
 - If charging a Li-Po battery, connect the JST_XH Balance adapter to the **Balance Circuit Adapter Board Connector (H)**, then connect the balance connector of the battery to the JST_XH Balance adapter. A 1S battery will not have a balance connector.
 - Connect the battery to the battery adapter cable.
 - Press and hold the **Start/Stop Button (I)** for 3 seconds to begin charging. If there is no error, charging will begin.
 - Press and hold the **Start/Stop Button (I)** for 3 seconds at any time to stop charging.
 - When charging is complete, disconnect the battery from the charger.

LED INDICATORS

OPERATION	LED COLOR	LED STATUS	SOUND
Constant Current	Red LED	Blinking every 2 seconds	–
Constant Voltage*	Red LED	Solid ON	–
	Yellow LED	Blinking every 2 seconds	–
Charging Complete Alert	Red LED	Solid ON	–
	Yellow LED	Solid ON	–
	Green LED	Blinking once per second 5 times	1 beep per second 5 times
Charging Complete	All LEDs	Solid ON	–

*When the Li-Po battery reaches Constant Voltage charging, it is charged to approximately 90%. If 90% capacity is acceptable, press and hold the **Start/Stop Button (I)** for 3 seconds to end the charge cycle, then disconnect the battery.

Ni-MH Charging

OPERATION	LED COLOR	LED STATUS	SOUND
Constant Current	Red LED	Blinking every 2 seconds	–
Charging Complete Alert	Red LED	Solid ON	–
	Yellow LED	Solid ON	–
	Green LED	Blinking once per second 5 times	1 beep per second 5 times
Charging Complete	All LEDs	Solid ON	–

Li-Po BATTERY FAST CHARGING

If you intend to use your battery for casual sport use rather than racing, you may want to select Li-Po Fast charging. Fast charging does not balance the individual cells of the battery as precisely as normal charging, but the charge cycle is completed faster. This MAY lower the performance or speed of your vehicle slightly, but it is likely you will not notice this in normal operation.

BATTERY CAPACITY INDICATOR

When charging begins, the **4-Digit LED Indicator (C)** will cycle back and forth between the currently selected battery type and the capacity data "0000". After 30 seconds, the **4-Digit LED Indicator** will only show the battery capacity. The battery capacity value (in mA) shown on the display will continue to increase as the charge cycle progresses. When charging is complete, it will display the final capacity added to the battery.

CELL VOLTAGE INDICATOR

After 30 seconds of charging, you can push the **Start/Stop Button (I)** once to display the individual cell voltages in a 1–6S Li-Po battery. The **4-Digit LED Indicator (C)** will cycle through the following sequence (actual values shown will differ from this example):

0000	Present Charge Capacity	
C6	Total Cells Present: 1 to 6	
22.2	Total Pack Voltage: 3.7 to 25.2	
C-1	First Cell	3.70 First Cell Voltage
C-2	Second Cell	3.70 Second Cell Voltage
C-3	Third Cell	3.70 Third Cell Voltage
C-4	Fourth Cell	3.70 Fourth Cell Voltage
C-5	Fifth Cell	3.70 Fifth Cell Voltage
C-6	Sixth Cell	3.70 Sixth Cell Voltage
22.2	Total Pack Voltage: 3.7 to 25.2	
0000	Present Charge Capacity	

The cell voltage will only be displayed for the actual number of cells in the battery. If you push the **Start/Stop Button** again during this sequence, the **4-Digit LED Indicator** will show the present charge capacity data and resume normal operation.
The cell voltages can also be displayed at any time following the completion of the charge cycle before the battery type is changed, the battery is removed or another charge cycle is started.

TROUBLESHOOTING

When an error occurs, the **Red LED (L)** will blink and a beep will sound twice per second 10 times. Once the alert has sounded 10 times, the **Red LED** will glow solid and the **4-Digit LED Indicator (C)** will show the error condition that has been detected. Once the error condition has been resolved, press and hold the **Start/Stop Button (I)** for 3 seconds to reset the charger.

ERROR CONDITIONS	PROBLEM
'-11-'	Dead cell or imbalance between cells is too high (over 0.3V) for safe charging
'-22-'	Polarity (+ and –) connections of battery are incorrect for safe charging
'-33-'	Battery not connected correctly
'-44-'	Charger has become too hot for safe charging
'-55-'	Over-current or short-circuit condition on the battery
'-66-'	The Battery Type Switch was moved to a different position during charging
'-77-'	The DC input voltage is too high or low for safe operation
'-88-'	One cell of the battery pack is too high or too low for safe charging

DEUTSCH

HINWEIS
Alle Anweisungen, Garantien und anderen zugehörigen Dokumente können im eigenen Ermessen von Horizon Hobby, Inc. jederzeit geändert werden. Die aktuelle Produktliteratur finden Sie auf horizonhobby.com unter der Registerkarte „Support“ für das betreffende Produkt.

Spezielle Bedeutungen

Die folgenden Begriffe werden in der gesamten Produktliteratur verwendet, um auf unterschiedlich hohe Gefahrenrisiken beim Betrieb dieses Produkts hinzuweisen:

HINWEIS: Wenn diese Verfahren nicht korrekt befolgt werden, können sich möglicherweise Sachschäden UND geringe oder keine Gefahr von Verletzungen ergeben.

ACHTUNG: Wenn diese Verfahren nicht korrekt befolgt werden, ergeben sich wahrscheinlich Sachschäden UND die Gefahr von schweren Verletzungen.

WARNING: Wenn diese Verfahren nicht korrekt befolgt werden, ergeben sich wahrscheinlich Sachschäden, Kollateralschäden und schwere Verletzungen ODER mit hoher Wahrscheinlichkeit oberflächliche Verletzungen.


WARNING: Lesen Sie die GESAMTE Bedienungsanleitung, um sich vor dem Betrieb mit den Produktfunktionen vertraut zu machen. Wird das Produkt nicht korrekt betrieben, kann dies zu Schäden am Produkt oder persönlichem Eigentum führen oder schwere Verletzungen verursachen. Dies ist ein hochentwickeltes Hobby-Produkt. Es muss mit Vorsicht und gesundem Menschenverstand betrieben werden und benötigt gewisse mechanische Grundfähigkeiten. Wird dieses Produkt nicht auf eine sichere und verantwortungsvolle Weise betrieben, kann dies zu Verletzungen oder Schäden am Produkt oder anderen Sachwerten führen. Dieses Produkt eignet sich nicht für die Verwendung durch Kinder ohne direkte Überwachung eines Erwachsenen. Versuchen Sie nicht ohne Genehmigung durch Horizon Hobby, Inc., das Produkt zu zerlegen, es mit inkompatiblen Komponenten zu verwenden oder auf jegliche Weise zu erweitern. Diese Bedienungsanleitung enthält Anweisungen für Sicherheit, Betrieb und Wartung. Es ist unbedingt notwendig, vor Zusammenbau, Einrichtung oder Verwendung alle Anweisungen und Warnhinweise im Handbuch zu lesen und zu befolgen, damit es bestimmungsgemäß betrieben werden kann und Schäden oder schwere Verletzungen vermieden werden.

Nicht geeignet für Kinder unter 14 Jahren. Dies ist kein Spielzeug.

Dieses Gerät darf weder von physisch noch von geistig behinderten oder in ihrer Bewegung eingeschränkten Personen benutzt werden. Auch dürfen Personen, die weder Erfahrung noch Kenntnis im Umgang mit dem Gerät haben, dieses erst nach Anweisungen durch eine für ihre Sicherheit zuständige Person in Betrieb nehmen.

SICHERHEITSHINWEISE UND WARNUNGEN

- WARNING:** Unaufmerksamkeit oder falscher Gebrauch des Produktes in Zusammenhang mit den folgenden Warnungen kann zu Fehlfunktionen, elektrischen Störungen, große Hitzeentwicklung, FEUER, und tödlichen Verletzungen und Sachbeschädigungen führen.
- Lassen Sie das Netzgerät, Ladegerät und Akku niemals unbeaufsichtigt während des Betriebes.
- Versuchen Sie niemals tiefentladene, beschädigte oder nasse Akkus zu laden.
- Laden Sie niemals Akkupacks, die aus verschiedenen Zellentypen bestehen.

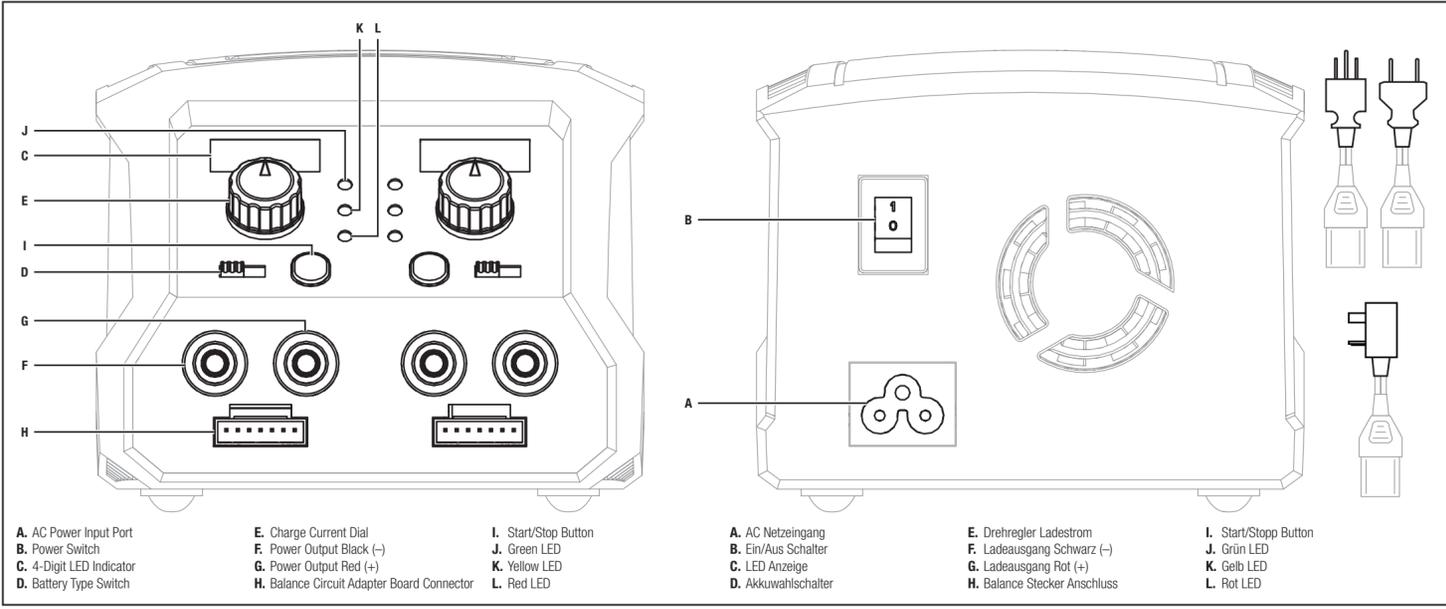

- Lassen Sie niemals Kinder unter 14 Jahren Akkus laden.
- Laden Sie niemals Akkus in extremer Hitze oder Kälte oder in direkter Sonneneinstrahlung.
- Laden Sie keine Akkus dessen Kabel beschädigt, punktiert oder gekürzt ist.
- Schließen Sie niemals das Ladegerät an wenn das Kabel punktiert oder gekürzt ist.
- Schließen Sie niemals das Ladegerät an eine 12 Volt Autobatterie bei laufendem Motor an.
- Versuchen Sie niemals das Ladegerät auseinander zu bauen oder ein beschädigtes Ladegerät in Betrieb zu nehmen.
- Schließen Sie nie das Ladegerät an eine AC und eine DC Stromquelle gleichzeitig an.
- Schließen Sie niemals den DC Eingang an eine AC Stromquelle an.
- Benutzen Sie ausschließlich wiederaufladbare Akkus die für das Laden mit diesem Ladegerät auch geeignet sind.
- Überprüfen Sie immer den Akku vor dem Laden.
- Halten Sie den Akku fern von Materialien die von Hitze beeinflusst werden können.
- Beobachten Sie immer den Ladevorgang und halten einen Feuerlöscher zu jeder Zeit bereit.
- Beenden Sie sofort den Ladevorgang wenn der Akku zu heiß zum Anfassen werden sollte, oder seine Form (anschwellen) verändert.
- Schließen Sie erst das Ladekabel am Ladegerät an und dann den Akku, um ein verpolen der Anschlüsse zu vermeiden. Trennen Sie die Verbindung nach dem Laden in umgekehrter Reihenfolge.
- Schließen Sie immer die positiven roten (+) Anschlüsse und negativen schwarzen (-) Anschlüsse korrekt an.
- Trennen Sie nach dem Laden den Akku vom Ladegerät und lassen das Ladegerät zwischen den Ladevorgängen abkühlen.
- Laden Sie immer in gut belüfteten Bereichen.
- Beenden Sie bei Fehlfunktionen sofort alle Prozesse und kontaktieren Horizon Hobby.

WARNING: Lassen Sie niemals das Ladegerät unbeaufsichtigt. Überschreiten Sie niemals den maximalen Ladestrom. Laden Sie niemals nicht-geeignete Akkus oder Akkus im falschen Mode. Falsch- oder Fehlbefehlung kann zu großer Hitze, Feuer oder tödlichen Verletzungen führen.

ACHTUNG: Bitte stellen Sie immer sicher, dass die verwendeten Akkus mit den Spezifikationen des Ladegerätes übereinstimmen und die Einstellungen des Ladegerät korrekt eingestellt sind. Ein Nichtbefolgen kann zu großer Hitze und weiteren Fehlfunktionen führen, die zu Personen- oder Sachschäden führen können. Bitte kontaktieren Sie Horizon Hobby oder einen autorisierten Händler wenn Sie Fragen zur Akkukompatibilität haben.

- Im Lieferumfang mit enthalten
- JST_XH Balance Adapter (2)
- Ladeadapter Bananestecker zu EC3 Akkustecker (2)
- AC Stromanschluß (eine Region US,EU, AU oder UK)

FEATURES

- Mit den beiden Ladeanschlüssen können zwei Akkus gleichzeitig geladen werden. Die Akkus können dabei unterschiedlicher Art sein, verschiedene Kapazitäten und Zellenanzahlen haben
- 50W Ausgangsleistung für Ni-MH (4–8C) oder Li-Po (1–6S) Akkus
- Einfach zu bedienen, gut ablesbar
- Ladestrom, Akkutyp, Ladekapazität, Zellspannung und Fehlermeldungen werden über zwei 4-stellige LED Anzeigen angezeigt
- Einstellbarer Ladestrom von 0,1 bis 6,0A mit zwei einstellbaren Laderegeln
- Drei farbige LEDs (Rot, Gelb und Grün) zeigen den Ladestatus an

ACHTUNG: Stellen Sie vor dem Laden sicher, dass Sie den korrekten Akkutyp gewählt für den zu ladenden Akku gewählt haben.

FÜR DEN START

ACHTUNG: Schalten Sie immer erst das Ladegerät ein bevor Sie ein Akku anschließen, da sonst das Ladegerät oder Akku beschädigt werden kann.

Bei Verwendung einer externen AC Stromquelle:

- Schließen Sie den AC Netzstecker an der **AC Netzbuchse des Ladegerätes (A)** an.
- Schließen Sie den Stecker am AC Netzstrom an.
- Schalten Sie das Ladegerät mit dem **Ein/Aus Schalter (B)** ein.

BETRIEB DES LADEGERÄTES

Die hier beschriebene Anleitungen sind für einen Kanal. Für die Nutzung des zweiten Kanals gilt der gleiche Vorgang.

- Wählen Sie mit dem **Akku Wahlschalter (D)** den Akkutyp (Ni-MH/ Li-Po/Li-Po Fast) den Sie laden möchten. Die **LED Anzeige** zeigt dann die Auswahl für 2 Sekunden an und wechselt dann zur Anzeige des mit dem **Drehregler (E)** eingestellten Ladestrom.
- Stellen Sie mit dem **Drehregler** den gewünschten Ladestrom (01–6,0A) ein. Dieser wird dann auf der LED Anzeige angezeigt.
- Schließen Sie den Bananenstecker des Ladekabels am **Ladeausgang Schwarz (-) (F)** und **Rot (+) (G)** an und stellen dabei sicher, dass die Anschlüsse polrichtig verbunden sind.
- Bei dem Laden eines Lipo Akkus schließen Sie den JST_XH Balance Adapter an den **Balancerschluss (H)** an und schließen dann den Balancerschluss des Akkus an den Adapter an. Ein 1S Akku hat keinen Balancerschluss.
- Schließen Sie erst das Ladekabel am Ladegerät an und dann den Akku, um ein verpolen der Anschlüsse zu vermeiden. Trennen Sie die Verbindung nach dem Laden in umgekehrter Reihenfolge.
- Schließen Sie immer die positiven roten (+) Anschlüsse und negativen schwarzen (-) Anschlüsse korrekt an.
- Trennen Sie nach dem Laden den Akku vom Ladegerät und lassen das Ladegerät zwischen den Ladevorgängen abkühlen.
- Laden Sie immer in gut belüfteten Bereichen.
- Beenden Sie bei Fehlfunktionen sofort alle Prozesse und kontaktieren Horizon Hobby.

LED INDIKATOR

BETRIEB	LED FARBE	LED STATUS	TON
Konstanter Ladestrom	Rot	Blinkt alle 2 Sekunden	–
Konstantspannung*	Rot	Leuchtet	–
	Gelb	Blinkt alle 2 Sekunden	–
Hinweis Laden fertig	Rot	Leuchtet	–
	Gelb	Leuchtet	–
	Grün	Blinkt einmal per Sekunde 5 Mal	1 Piepton per 5 Sekunden
Laden fertig	Alle LEDs	Leuchtet	–

*Erreicht der Li-Po Akku die Konstantspannungsladung ist der Ladevorgang ca zu 90% erledigt. Sollten 90% der Kapazität ausreichend sein drücken und halten Sie den **Start/Stopp Button (I)** für drei Sekunden um den Ladevorgang zu beenden und trennen den Akku.

Ni-MH Laden

BETRIEB	LED FARBE	LED STATUS	TON
Konstanter Ladestrom	Rot	Blinkt alle 2 Sekunden	–
Hinweis Laden fertig	Rot	Leuchtet	–
	Gelb	Leuchtet	–
	Grün	Blinkt einmal per Sekunde 5 Mal	1 Piepton per 5 Sekunden
Laden fertig	Alle LEDs	Leuchtet	–

LI-PO AKKU SCHNELLADUNG (FAST CHARGING)

Sollten Sie ihre Akkus eher für den Sport- als für den Rennsatz gebrauchen stellen Ihnen auch die Funktion Fast Charging zur Verfügung. Bei dieser Funktion werden die einzelnen Zellen nicht balanciert und der Ladevorgang ist schneller beendet. Dieses könnte etwas die Leistung oder Geschwindigkeit reduzieren, es ist jedoch sehr wahrscheinlich, dass Sie dieses im normalen Betrieb nicht merken.

ANZEIGE AKKUKAPAZITÄTSANZEIGE

Bei dem Anfang des Ladevorganges springt die **4 stellige LED Anzeige (C)** zwischen dem gewählten Akkutyp und der Kapazitätsanzeige 0000. Nach 30 Sekunden zeigt die **LED Anzeige** die Akkukapazität an. Diese Anzeige in mA steigt mit der Dauer des Ladevorganges. Ist der Ladevorgang beendet wird die finale Kapazität angezeigt.

ANZEIGE DER ZELLSPANNUNG

30 Sekunden nach Ladebeginn können Sie den **Start/Stopp Button (I)** einmal drücken um die Einzelspannungen in einem 1–6S Li-Po Akku anzuzeigen. Die **4 Stellen Ladeanzeige (C)** wechselt in folgender Sequenz: Die aktuellen Werte können von den Beispielwerten abweichen)

0000	Aktuelle Ladekapazität	
C6	angeschlossene Zellen: 1 bis 6	
22.2	Gesamtakkuspannung: 3,7 bis 25,2	
C-1	Erste Zelle	3,70 Spannung erste Zelle
C-2	Zweite Zelle	3,70 Spannung zweite Zelle
C-3	Dritte Zelle	3,70 Spannung dritte Zelle
C-4	Vierte Zelle	3,70 Spannung vierte Zelle
C-5	Fünfte Zelle	3,70 Spannung fünfte Zelle
C-6	Sechste Zelle	3,70 Spannung sechste Zelle
22.2	Zellspannung gesamt: 3,7 bis 25,2 V	
0000	Aktuelle Ladekapazität	

Die Zellenspannung kann nur für die angeschlossenen Zellen angezeigt werden. Drücken Sie den **Start/Stopp Button** während dieser Sequenz zeigt die **LED Anzeige (C)** zeigt den Fehlercode. Ist die Fehlerursache beseitigt drücken und halten Sie den **Start/Stopp Button (I)** für 3 Sekunden um das Ladegerät zu resettieren.

PROBLEMLÖSUNG

Tritt ein Problem auf blinkt die **rote LED (L)** und ein Doppelton ertönt 10 mal. Nach dem Alarm ertönt leuchtet die **rote LED** und die **4-stellen LED Anzeige (C)** zeigt den Fehlercode. Ist die Fehlerursache beseitigt drücken und halten Sie den **Start/Stopp Button (I)** für 3 Sekunden um das Ladegerät zu resettieren.

FEHLMELDUNG	PROBLEM
'-11-'	Zelle defekt oder Zellenspannung zu unterschiedlich (über 0.3V) für eine sichere Ladung
'-22-'	Polarität (+ und –) Anschlüsse sind nicht korrekt für eine sichere Ladung
'-33-'	Akku nicht korrekt angeschlossen
'-44-'	Ladegerät ist zu heiss für sicheren Betrieb
'-55-'	Überspannung oder Kurzschluss am Akku
'-66-'	Der Akkuwahlschalter wurde während des Ladevorganges in eine andere Position geschaltet
'-77-'	Die DC Eingangsspannung ist für einen sicheren Betrieb zu hoch oder zu niedrig
'-88-'	Die Spannung einer Zelle ist zu hoch oder zu niedrig für eine sichere Ladung

DYNAMITE 5-YEAR US LIMITED CHARGER WARRANTY INFORMATION

We are so confident about the quality of our chargers we offer a 5-year replacement plan on all of our Dynamite Prophet and Passport chargers.

Our 5-year replacement plan requires proof of purchase (copy of the receipt) and we do, reserve the right to deny replacement to any abusers of our plan. See below for full details. Contact the appropriate Horizon Service Department for instructions on warranty claims.

5-YEAR US LIMITED WARRANTY

Warranty Period - Exclusive Warranty - Horizon Hobby, Inc., (“Horizon”) warrants that the included Dynamite Prophet, or Passport charger (“Product”) will be free from defects in materials and workmanship for a period of five (5) years after the date of purchase (“Warranty Period”). **What is Not Covered** - This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, in stallation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER’S INTENDED USE.

Purchaser’s Remedy - Horizon’s sole obligation and purchaser’s sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Products(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER’S SOLE AND EXCLUSIVE REMEDY. Replacement Products are covered under this warranty for thirty (30) days after receipt or for the remainder of the Warranty Period of the Product which they have replaced, whichever is longer.

Limitation of Liability - HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law - These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

NON-US LIMITED WARRANTY

What this Warranty Covers - Horizon Hobby, Inc. (“Horizon”) warrants to the original purchaser that the product purchased (the “Product”) will be free from defects in materials and workmanship at the date of purchase.

What is Not Covered - This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, in stallation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER’S INTENDED USE.

Purchaser’s Remedy - Horizon’s sole obligation and purchaser’s sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Products(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER’S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability - HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law - These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services - Your local hobby store and/ or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please visit our

WARRANTY SERVICES

Questions, Assistance, and Services - Your local hobby store and/ or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please visit our website at www.horizonhobby.com, submit a Product Support Inquiry at https://horizonhobby.quickbase.com/db/bhjh7ey8c7a=GenNewRecord, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services - If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at http://www.horizonhobby.com/content/_service-center_render-service-center. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton. YOU MUST CONTACT THE APPROPRIATE HORIZON SERVICE DEPARTMENT FOR ANY CHARGER WARRANTY CLAIM.

Warranty Requirements - For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service - Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of ½ hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier’s checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon’s Terms and Conditions found on our website http://www.horizonhobby.com/content/_service-center_render-service-center.

ATTENTION: Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender’s choice and at the sender’s expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

website at www.horizonhobby.com, submit a Product Support Inquiry at https://horizonhobby.quickbase.com/db/bhjh7ey8c7a=GenNewRecord, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services - If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at http://www.horizonhobby.com/content/_service-center_render-service-center. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

NOTE: Do not ship Li-Po batteries to Horizon. If you have any issue with a Li-Po battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements - For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service - Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of ½ hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier’s checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon’s Terms and Conditions found on our website http://www.horizonhobby.com/content/_service-center_render-service-center.

ATTENTION: Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender’s choice and at the sender’s expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

WARRANTY AND SERVICE CONTACT INFORMATION			
Country of Purchase	Horizon Hobby	Contact Information	Address
	Horizon Service Center (Repairs and Repair Requests)	servicecenter.horizonhobby.com/RequestForm/	
United States of America	Horizon Product Support (Product Technical Assistance)	www.quickbase.com/db/bghj7ey8c7a=GenNewRecord 888-959-2306	4105 Fieldstone Rd Champaign, Illinois, 61822 USA
	Sales	sales@horizonhobby.com 888-959-2306	
	United Kingdom	Service/Parts/Sales: Horizon Hobby Limited	
Germany	Horizon Technischer Service Sales: Horizon Hobby GmbH	service@horizonhobby.de +49 (0) 4121 2655 100	Christian-Junge-Straße 1 25337 Elmshorn, Germany
France	Service/Parts/Sales: Horizon Hobby SAS	infofrance@horizonhobby.com +33 (0) 1 60 18 34 90	11 Rue Georges Charpak 77127 Lieusaint, France
China	Service/Parts/Sales: Horizon Hobby – China	info@horizonhobby.com.cn +86 (021) 5180 9868	Room 506, No. 97 Changshou Rd. Shanghai, China 200060

FCC INFORMATION

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

COMPLIANCE INFORMATION FOR THE EUROPEAN UNION

Declaration of Conformity (in accordance with ISO/IEC 17050-1)

No. HH2013110702

Product(s): Prophet Sport Duo, 50Wx2, Li-Po/Ni-MH Charger
Item Number(s): DYNC2020

The object of declaration described above is in conformity with the requirements of the specifications listed below, following the provisions of the EMC Directive 2004/108/EC and LVD Directive 2006/95/EC:

EN55022:2010 + AC:2011
EN55024:2010

EN61000-3-2:2006+A1:2009+A2:2009
EN61000-3-3:2008

EN60335-1: 2002+A11:2004+A1:2004+A12:2006+A2:2006+A13:2008+A14:2010+A15:2011
EN60335-2-29:2004+A2:2010

Signed for and on behalf of:

Horizon Hobby, Inc.
Champaign, IL USA
November 07, 2013

Instructions for disposal of WEEE by users in the European Union

 This product must not be disposed of with other waste. Instead, it is the user’s responsibility to dispose of their waste equipment by handing it over to a designated collections point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.

GARANTIE UND SERVICE INFORMATIONEN

Garantiezeitraum - Exklusive Garantie Horizon Hobby Inc (Horizon) garantiert, dass das gekaufte Produkt frei von Material- und Montagefehlern ist. Der Garantiezeitraum entspricht den gesetzlichen Bestimmungen des Landes, in dem das Produkt erworben wurde. In Deutschland beträgt der Garantiezeitraum 6 Monate und der Gewährleistungszeitraum 18 Monate nach dem Garantiezeitraum.

Einschränkungen der Garantie - (a) Die Garantie wird nur dem Erstkäufer (Käufer) gewährt und kann nicht übertragen werden. Der Anspruch des Käufers besteht in der Reparatur oder dem Tausch im Rahmen dieser Garantie. Die Garantie erstreckt sich ausschließlich auf Produkte, die bei einem autorisierten Horizon Händler erworben wurden. Verkäufe an dritte werden von dieser Garantie nicht gedeckt. Garantieansprüche werden nur angenommen, wenn ein gültiger Kaufnachweis erbracht wird. Horizon behält sich das Recht vor, diese Garantiebestimmungen ohne Ankündigung zu ändern oder modifizieren und wiederum damit bestehende Garantiebestimmungen.

(b) Horizon übernimmt keine Garantie für die Verkaufbarkeit des Produktes, die Fähigkeiten und die Fitness des Verbrauchers für einen bestimmten Einsatzzweck des Produktes. Der Käufer allein ist dafür verantwortlich, zu prüfen, ob das Produkt seinen Fähigkeiten und dem vorgesehenen Einsatzzweck entspricht.

(c) Ansprüche des Käufers Es liegt ausschließlich im Ermessen von Horizon, ob das Produkt, bei dem ein Garantiefall festgestellt wurde, repariert oder ausgetauscht wird. Dies sind die exklusiven Ansprüche des Käufers, wenn ein Defekt festgestellt wird. Horizon behält sich vor, alle eingesetzten Komponenten zu prüfen, die in den Garantiefall einbezogen werden können. Die Entscheidung zur Reparatur oder zum Austausch liegt nur bei Horizon. Die Garantie schließt kosmetische Defekte oder Defekte, hervorgerufen durch höhere Gewalt, falsche Behandlung des Produktes, falscher Einsatz des Produktes, kommerziellen Einsatz oder Modifikationen irgendwelcher Art aus. Die Garantie schließt Schäden, die durch falschen Einbau, falsche Handhabung, Unfälle, Betrieb, Service oder Reparaturversuche, die nicht von Horizon ausgearbeitet wurden aus. Rücksendungen durch den Käufer direkt an Horizon oder eine seiner Landesvertretung bedürfen der Schriftform.

Schadensbeschränkung - Horizon ist nicht für direkte oder indirekte Folgeschäden, Einkommensausfälle oder kommerzielle Verluste, die in irgendeinem Zusammenhang mit dem Produkt stehen verantwortlich, unabhängig ab ein Anspruch im Zusammenhang mit einem Vertrag, der Garantie oder der Gewährleistung erhoben werden. Horizon wird darüber hinaus keine Ansprüche aus einem Garantiefall akzeptieren, die über den individuellen Wert des Produktes hinaus gehen. Horizon hat keinen Einfluss auf den Einbau, die Verwendung oder die Wartung des Produktes oder etwaiger Produktkombinationen, die vom Käufer gewählt werden. Horizon übernimmt keine Garantie und akzeptiert keine Ansprüche für in der folge auftretende Verletzungen oder Beschädigungen. Mit der Verwendung und dem Einbau des Produktes akzeptiert der Käufer alle aufgeführten Garantiebestimmungen ohne Einschränkungen und Vorbehalte. Wenn Sie als Käufer nicht bereit sind, diese Bestimmungen im Zusammenhang mit der Benutzung des Produktes zu akzeptieren, werden Sie gebeten, dass Produkt in unbenutztem Zustand in der Originalverpackung vollständig bei dem Verkäufer zurückzugeben.

GARANTIE UND SERVICE KONTAKTINFORMATIONEN			
Land des Kauf	Horizon Hobby	Adresse	Telefon/Email Adresse
Deutschland	Horizon Technischer Service Horizon Hobby GmbH	Christian-Junge-Straße 1 25337 Elmshorn	+49 (0) 4121 2655 100 service@horizonhobby.de

RECHTLICHE INFORMATIONEN FÜR DIE EUROPÄISCHE UNION



Konformitätserklärung laut Allgemeine Anforderungen (ISO/IEC 17050-1:2004, korrigierte Fassung 2007-06-15); Deutsche und Englische Fassung EN ISO/IEC 17050-1:2010 Declaration of conformity (in accordance with ISO/IEC 17050-1)

No. HH2013110702

Horizon Hobby GmbH
Christian-Junge-Straße 1
D-25337 Elmshorn

erklärt das Produkt: Prophet Sport Duo, 50Wx2, Li-Po/Ni-MH Charger, DYNC2020
declares the product: Prophet Sport Duo, 50Wx2, Li-Po/Ni-MH Charger, DYNC2020

den übrigen einschlägigen Bestimmungen des EMV-Richtlinie 2004/108/EC und LVD-Richtlinie 2006/95/EC, complies with the essential requirements of the EMC Directive 2004/108/EC and LVD Directive 2006/95/EC.

Angewendete harmonisierte Normen:

Harmonized standards applied:

EN55022:2010 + AC:2011
EN55024:2010

EN61000-3-2:2006+A1:2009+A2:2009
EN61000-3-3:2008

EN60335-1: 2002+A11:2004+A1:2004+A12:2006+A2:2006+A13:2008+A14:2010+A15:2011
EN60335-2-29:2004+A2:2010

Signed for and on behalf of:

Elmshorn
07.11.2013

Horizon Hobby GmbH; Christian-Junge-Straße 1; D-25337 Elmshorn
HR Pl: HR8 1909, USIDAN: DE812678792; STR.NRL: 1829812324
Geschäftsführer: Birgit Schamuhn, Steven A. Hall – Tel.: +49 (0) 4121 2655 100 • Fax: +49 (0) 4121 2655 111
eMail: info@horizonhobby.de; Internet: www.horizonhobby.de
Es gelten unsere allgemeinen Geschäftsbedingungen, die in unseren Geschäftsräumen eingesehen werden können.
Eare bleibt bis zur vollständigen Bezahlung Eigentum der Horizon Hobby GmbH

Anweisungen zur Entsorgung von Elektro– und Elektronik-Altgeräten für Benutzer in der Europäischen Union

Dieses Produkt darf nicht zusammen mit anderem Abfall entsorgt werden. Stattdessen ist der Benutzer dafür verantwortlich, unbrauchbare Geräte durch Abgabe bei einer speziellen Sammelstelle für das Recycling von unbrauchbaren elektrischen und elektronischen Geräten zu entsorgen. Die separate Sammlung und das Recycling von unbrauchbaren Geräten zum Zeitpunkt der Entsorgung hilft, natürliche Ressourcen zu bewahren und sicherzustellen, dass Geräte auf eine Weise wiederverwertet werden, bei der die menschliche Gesundheit und die Umwelt geschützt werden. Weitere Informationen dazu, wo Sie unbrauchbare Geräte zum Recycling abgeben können, erhalten Sie bei lokalen Ämtern, bei der Müllabfuhr für Haushaltsmüll sowie dort, wo Sie das Produkt gekauft haben.

GARANTIE ET RÉPARATIONS

Durée de la garantie - Garantie exclusive - Horizon Hobby, Inc. (Horizon) garantit que le produit acheté (le « Produit ») sera exempt de défauts matériels et de fabrication à sa date d’achat par l’Acheteur. La durée de garantie correspond aux dispositions légales du pays dans lequel le produit a été acquis. La durée de garantie est de 6 mois et la durée d’obligation de garantie de 18 mois à l’expiration de la période de garantie.

Limitations de la garantie - (a) La garantie est donnée à l’acheteur initial (« Acheteur ») et n’est pas transférable. Le recours de l’acheteur consiste en la réparation ou en l’échange dans le cadre de cette garantie. La garantie s’applique uniquement aux produits achetés chez un revendeur Horizon agréé. Les ventes faites à des tiers ne sont pas couvertes par cette garantie. Les revendications en garantie seront acceptées sur fourniture d’une preuve d’achat valide uniquement. Horizon se réserve le droit de modifier les dispositions de la présente garantie sans avis préalable et même alors les dispositions de garantie existantes.

(b) Horizon n’endosse aucune garantie quant à la vendabilité du produit ou aux capacités et à la forme physique de l’utilisateur pour une utilisation donnée du produit. Il est de la seule responsabilité de l’acheteur de vérifier si le produit correspond à ses capacités et à l’utilisation prévue. (c) Recours de l’acheteur – Il est de la seule discrétion d’Horizon de déterminer si un produit présentant un cas de garantie sera réparé ou échangé. Ce sont là les recours exclusifs de l’acheteur lorsqu’un défaut est constaté. Horizon se réserve la possibilité de vérifier tous les éléments utilisés et susceptibles d’être intégrés dans le cas de garantie. La décision de réparer ou de remplacer le produit est du seul ressort d’Horizon. La garantie exclut les défauts esthétiques ou les défauts provoqués par des cas de force majeure, une manipulation incorrecte du produit, une utilisation incorrecte ou commerciale de ce dernier ou encore des modifications de quelque nature qu’elles soient. Horizon ne couvre pas les dégâts résultant d’un montage ou d’une manipulation erronés, d’accidents ou encore du fonctionnement ainsi que des tentatives d’entretien ou de réparation non effectuées par Horizon. Les retours effectués par le fait de l’acheteur directement à Horizon ou à l’une de ses représentations nationales requièrent une confirmation écrite.

Limitation des dégâts - Horizon ne saurait être tenu pour responsable de dommages conséquents directs ou indirects, de pertes de revenus ou de pertes commerciales, liés de quelque manière que ce soit au produit et ce, indépendamment du fait qu’un recours puisse être formulé en relation avec un contrat, la garantie ou l’obligation de garantie. Par ailleurs, Horizon n’acceptera pas de recours issus d’un cas de garantie lorsque ces recours dépassent la valeur unitaire du produit. Horizon n’exerce aucune influence sur le montage, l’utilisation ou la maintenance du produit ou sur d’éventuelles combinaisons de produits choisies par l’acheteur. Horizon ne prend en compte aucune garantie et n’accepte aucun recours pour les blessures ou les dommages pouvant en résulter. En utilisant et en montant le produit, l’acheteur accepte sans restriction ni réserve toutes les dispositions relatives à la garantie figurant dans le présent document. Si vous n’êtes pas prêt, en tant qu’acheteur, à accepter ces dispositions en relation avec l’utilisation du produit, nous vous demandons de restituer au vendeur le produit complet, non utilisé et dans son emballage d’origine.

COORDONNÉES DE GARANTIE ET RÉPARATIONS

Pays d’achat	Horizon Hobby	Adresse	Numéro de téléphone/Courriel
France	Horizon Hobby SAS	11 Rue Georges Charpak 77127 Lieusaint	+33 (0) 1 60 18 34 90 infofrance@horizonhobby.com

INFORMATIONS DE CONFORMITÉ POUR L’UNION EUROPÉENNE

☑ Déclaration de conformité (conformément à la norme ISO/IEC 17050-1)

No. HH2013110702

Produit(s): Prophet Sport Duo, 50Wx2, Li-Po/Ni-MH Charger
Numéro(s) d’article: DYNC2020

L’objet de la déclaration décrit ci-dessus est en conformité avec les exigences des spécifications énumérées ci-après, suivant les conditions des directives CEM 2004/108/EC et LVD 2006/95/EC:

EN55022:2010 + AC:2011
EN55024:2010

EN61000-3-2:2006+A1:2009+A2:2009
EN61000-3-3:2008

EN60335-1: 2002+A11:2004+A1:2004+A12:2006+A2:2006+A13:2008+A14:2010+A15:2011
EN60335-2-29:2004+A2:2010

Signé en nom et pour le compte de:

Horizon Hobby, Inc.
Champaign, IL USA
07.11.2013

☑ Elimination dans l’Union Européenne

Ce produit ne doit pas être éliminé avec les ordures ménagères. Il est de la responsabilité de l’utilisateur de remettre le produit à un point de collecte officiel des déchets d’équipements électriques. Cette procédure permet de garantir le respect de l’environnement et l’absence de sollicitation excessive des ressources naturelles. Elle protège de plus le bien-être de la communauté humaine. Pour plus d’informations quant aux lieux d’éliminations des déchets d’équipements électriques, vous pouvez contacter votre mairie ou le service local de traitement des ordures ménagères.

GARANZIA

Periodo di garanzia - La garanzia esclusiva - Horizon Hobby, Inc., (Horizon) garantisce che i prodotti acquistati (il “Prodotto”) sono privi di difetti relativi ai materiali e di eventuali errori di montaggio. Il periodo di garanzia è conforme alle disposizioni legali del paese nel quale il prodotto è stato acquistato. Tale periodo di garanzia ammonta a 6 mesi e si estende ad altri 18 mesi dopo atto dai bambini senza una diretta supervisione di un adulto. Il manuale del prodotto contiene le istruzioni di sicurezza, di funzionamento e di manutenzione del prodotto stesso. È fondamentale leggere e seguire tutte le istruzioni e le avvertenze nel manuale prima di mettere in funzione il prodotto. Solo così si eviterà un utilizzo errato e di preveniranno incidenti, lesioni o danni.

Limiti della garanzia - (a) La garanzia è limitata all’acquirente originale (Acquirente) e non è cedibile a terzi. L’acquirente ha il diritto a far riparare o a far sostituire la merce durante il periodo di questa garanzia. La garanzia copre solo quei prodotti acquistati presso un rivenditore autorizzato Horizon. Altre transazioni di terze parti non sono coperte da questa garanzia. La prova di acquisto è necessaria per far valere il diritto di garanzia. Inoltre, Horizon si riserva il diritto di cambiare o modificare i termini di questa garanzia senza alcun preavviso e di escludere tutte le altre garanzie già esistenti. (b) Horizon non si assume alcuna garanzia per la disponibilità del prodotto, per l’adeguatezza o l’idoneità del prodotto a particolari previsti dall’utente. Tale sola responsabilità dell’acquirente il fatto di verificare se il prodotto è adatto agli scopi da lui previsti. (c) Richiesta dell’acquirente – spetta soltanto a Horizon, a propria discrezione riparare o sostituire qualsiasi prodotto considerato difettoso e che rientra nei termini di garanzia. Queste sono le uniche rivealse a cui l’acquirente si può appellare, se un prodotto è difettoso. Horizon si riserva il diritto di controllare qualsiasi componente utilizzato che viene coinvolto nella rivalsa di garanzia. Le decisioni relative alla sostituzione o alla riparazione avvengono solo in base alla discrezione di Horizon. Questa garanzia non copre dei danni superficiali o danni per cause di forza maggiore, uso errato del prodotto, negligenza, uso ai fini commerciali, o una qualsiasi modifica a qualsiasi parte del prodotto. Questa garanzia non copre danni dovuti ad una installazione errata, ad un funzionamento errato, ad una manutenzione o un tentativo di riparazione non idonea a cura di soggetti diversi da Horizon. La restituzione del prodotto a cura dell’acquirente, o da un suo rappresentante, deve essere approvata per iscritto dalla Horizon.

Limiti di danno - Horizon non si riterrà responsabile per danni special, diretti, indiretti o consequenziali; perdita di profitto o di produzione; perdita commerciale connessa al prodotto, indipendentemente dal fatto che la richiesta si basa su un contratto o sulla garanzia. Inoltre la responsabilità di Horizon non supera mai in nessun caso il prezzo di acquisto del prodotto per il quale si chiede la responsabilità. Horizon non ha alcun controllo sul montaggio, sull’utilizzo o sulla manutenzione del prodotto o di combinazioni di vari prodotti. Quindi Horizon non accetta nessuna responsabilità per danni o lesioni derivanti da tali circostanze. Con l’utilizzo e il montaggio del prodotto l’utente acquiesce a tutte le condizioni, limitazioni e riserve di garanzia citate in questa sede. Qualora l’utente non fosse pronto ad assumersi tale responsabilità associata all’uso del prodotto, si suggerisce di restituire il prodotto ininito, mai usato e immediatamente presso il venditore.

GARANZIA E REVISIONA INFORMAZIONI PER I CONTATTI

Stato di acquisto	Horizon Hobby	Indirizzo	Telefono/Indirizzo e-mail
Germania	Horizon Technischer Service Horizon Hobby GmbH	Christian-Junge-Straße 1 25337 Elmshorn, Germania	+49 (0) 4121 2655 100 service@horizonhobby.de

Riparazioni a pagamento - Se bisogna effettuare una riparazione a pagamento, effettueremo un preventivo che verrà inoltrato al vostro rivenditore. La riparazione verrà effettuata dopo l’autorizzazione da parte del vostro rivenditore. La somma per la riparazione dovrà essere pagata al vostro rivenditore. Le riparazioni a pagamento avranno un costo minimo di 30 minuti di lavoro e in futuro includeranno le spese di restituzione. Qualsiasi riparazione non pagata e non richiesta entro 90 giorni verrà considerata abbandonata e verrà gestita di conseguenza.

ATTENZIONE: Le riparazioni a pagamento sono disponibili solo sull’elettronica e sui motori. Le riparazioni a livello meccanico, soprattutto per gli elicotteri e le vetture RC sono molto costose e devono essere effettuate autonomamente dall’acquirente.

INFORMAZIONI SULLA CONFORMITÀ PER L’UNIONE EUROPEA

☑ Dichiarazione di conformità (in conformità con ISO/IEC 17050-1)

No. HH2013110702

Prodotto(i): Prophet Sport Duo, 50Wx2, Li-Po/Ni-MH Charger
Numero(i) articolo: DYNC2020

Gli oggetti presentati nella dichiarazione sopra citata sono conformi ai requisiti delle specifiche elencate qui di seguito, seguendo le disposizioni delle direttive EMC 2004/108/EC e LVD 2006/95/EC:

EN55022:2010 + AC:2011
EN55024:2010

EN61000-3-2:2006+A1:2009+A2:2009
EN6100